

Пусковые механизмы

GM, BMZ, TD, PS, SC, AS, NP, EP, GMS

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Казахстан +7(727)345-47-04

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Беларусь +(375)257-127-884

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Узбекистан +998(71)205-18-59

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Киргизия +996(312)96-26-47

эл.почта: skj@nt-rt.ru || сайт: <https://spark.nt-rt.ru/>

Jump Starter



Heavy Duty Jump Starter

Suitable for 12V 24V or 12/24V diesel,gasoline car ,truck,ship many other automotive

Boost /engine start current from 250 to 3400 Amp,full range: jump starter,booster,jump pack, boost pack ,power pack

Powerful, the batteries can be update 2*50AH,2*28AH,2*25AH,varies battery type:Lead acid, Lith PO4,LiFE,Spiral battery,very good performance battery with good CCA even in low temperature

Full protection:ON/OFF switch for safety,automatic circuit overload protection,reverse polarity/hook up alarm with charging light and buzzer,surge protection,low voltage alarm,over voltage alarm. And the fully protection safe guarder can be option.

Varies housing can be option:Strong and heavy duty rotary housing,metal case,wheel metal case,rubber coated plastic case

Different display model:Meter,Backlight/color coded voltmeter,digital

Multifunction for your option:fully automatic float switching charger, USB out, 12V socket outlet,compressor,inverter,

Strong and heavy duty clamps fits the professional jump starter

Model	Picture	Cranking Current (A)	Peak Current (A)	Voltage (V)	Battery Capacity (AH)
GM080A		1700	3400	12	1*50
GM080B		2400/1200	4000/2000	12	2*25
GM080C		3400/1700	6000/3000	12/24	2*50
GM080D		2400	4800	24	2*50
GM070		1500	3000	12	2*22
GM071		1500/7500	3000/1500	12/24	2*22

GM071-BT		750	1500	24	2*22
GM072		1500/7500	3000/1500	12/24	2*22
GM050		1200	3000	12	2*22
GM051		1200/600	3000/1500	12/24	2*22
GM052		600	1500	24	2*22
BMZ-C		500	1100	12	18
BMZ-D		1100/500	2200/1100	12/24	2*18
BMZ-H		1100	2200	12	2*18
BMZ-24		500	1100	24	2*18
BMZ-IC		500	1100	12	18
BMZ-T		500	1100	12	18
BMZ-U		/	/	12	/

BMZ-DBT		500	1100	12	18
TD03		500	1100	12	18
TD04		1100/500	2200/1100	12/24	2*18
TD05		500	1100	12	18

Multipurpose Jump Starter

Model	Picture	Cranking Current (A)	Peak Current (A)	Voltage (V)	Battery Capacity (AH)
GM021		400	1100	12	17
GM023		250	500	12	7
GM022		400	1100	12	17
GM022C		400	1100	12	17
GM022IC		400	1100	12	17
PS1000		500	1100	12	18
PS1000I		500	1100	12	18
PS1000C		400	900	12	17
PS1000u		600	1400	12	22
PS1200		600	1400	12	22

PS700		400	900	12	17
PS400		250	500	12	7
SC-01		250	500	12	7
SC-03		400	900	12	17
AS-01		600	1500	12	22
AS-02		400	900	12	17
NP01		250	500	12	7
NP03		400	900	12	17
NP03S		400	900	12	17
EP12/17-Z002W		700/400	1500/900	12/24	2*17
EP12/17-KOO2W		400	900	12	17
EP12/17-K0P2W		400	900	12	17

EP12/38-KOO2W		800	1800	12	38
GM151A		700	1400	12	8Ah LiFe
GMS151A		700	1400	12	8Ah LiFe

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Россия +7(495)268-04-70

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Казахстан +7(727)345-47-04

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Беларусь +(375)257-127-884

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Узбекистан +998(71)205-18-59

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Киргизия +996(312)96-26-47

По вопросам продаж и поддержки обращайтесь:

эл.почта: skj@nt-rt.ru || сайт: <https://spark.nt-rt.ru/>